



How to adjust brake on electric cart dumper

Presenter: Stephen May

Date: 04/09/2020

Removing fan cover.



COLLABORATIVE ENTREPRENEURIAL SPIRIT

WINNING THROUGH CUSTOMERS

HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST

EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE



Remove the three screws and pull fan cover off

Removing the fan from the shaft.




COLLABORATIVE ENTREPRENEURIAL SPIRIT

WINNING THROUGH CUSTOMERS

HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST

EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE

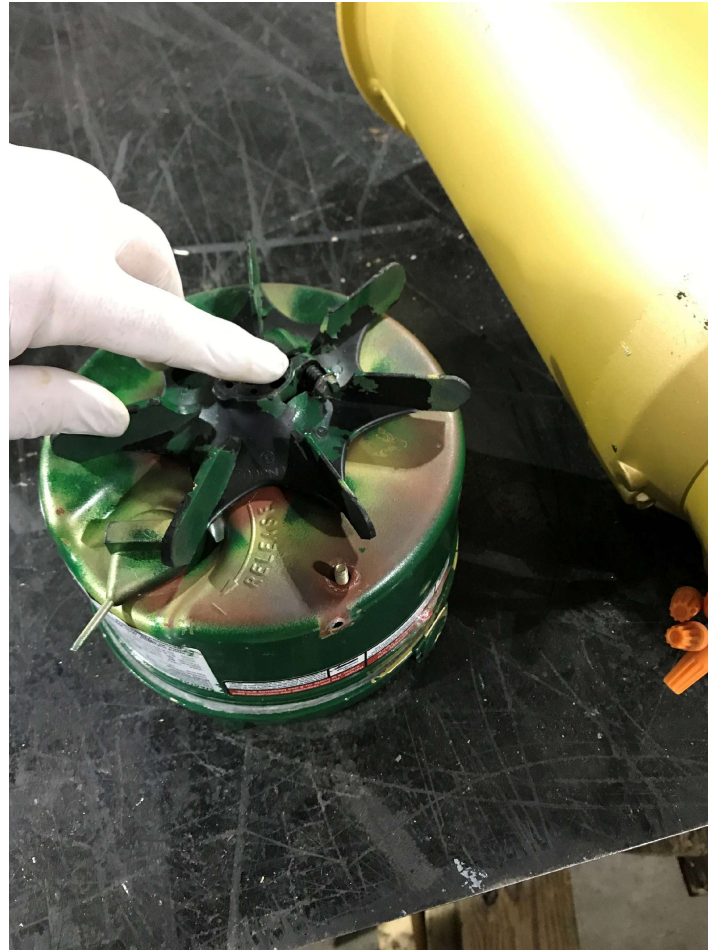

Loosen the screw and pry the fan off.

Removing the brake cover.



COLLABORATIVE ENTREPRENEURIAL SPIRIT

WINNING THROUGH CUSTOMERS

HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST

EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE



Remove the two small nuts. Hold the brake release to the position in picture
And pull off cover.

How to adjust the brake?



COLLABORATIVE ENTREPRENEURIAL SPIRIT


WINNING THROUGH CUSTOMERS

HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST

EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE

There are two adjusting screws that need to be adjusted.
Be sure to adjust them in $\frac{1}{4}$ turns equally clockwise to make the brake tighter and run dumper if the brake smokes its too tight.

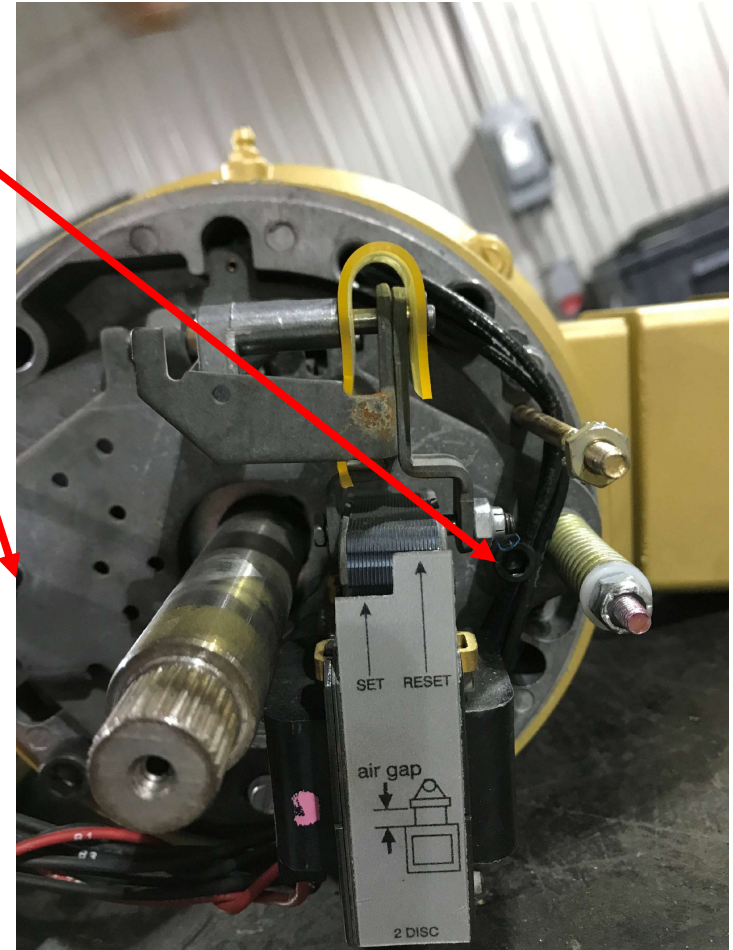

MS1

How to replace the brake disks. Remove the three screws.
If the dumper has been setting around for a while before install there could be rust formed on the pressure plate it will cause the brake to lock up. Take them apart and sand the rust off.




COLLABORATIVE ENTREPRENEURIAL SPIRIT

WINNING THROUGH CUSTOMERS

HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST

EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE

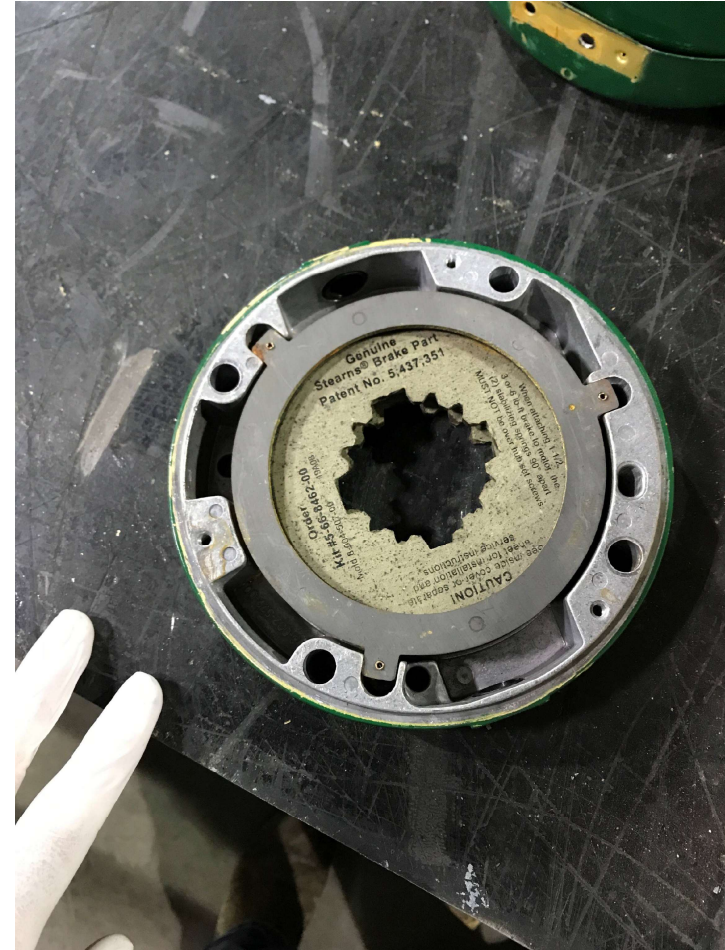

Slide 6

MS1

May, Steve, 4/14/2020

How to change the brake disks.



COLLABORATIVE ENTREPRENEURIAL SPIRIT

WINNING THROUGH CUSTOMERS

HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST


EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE



Pressure Plate

The spring goes away from You. The picture shows it flipped over.

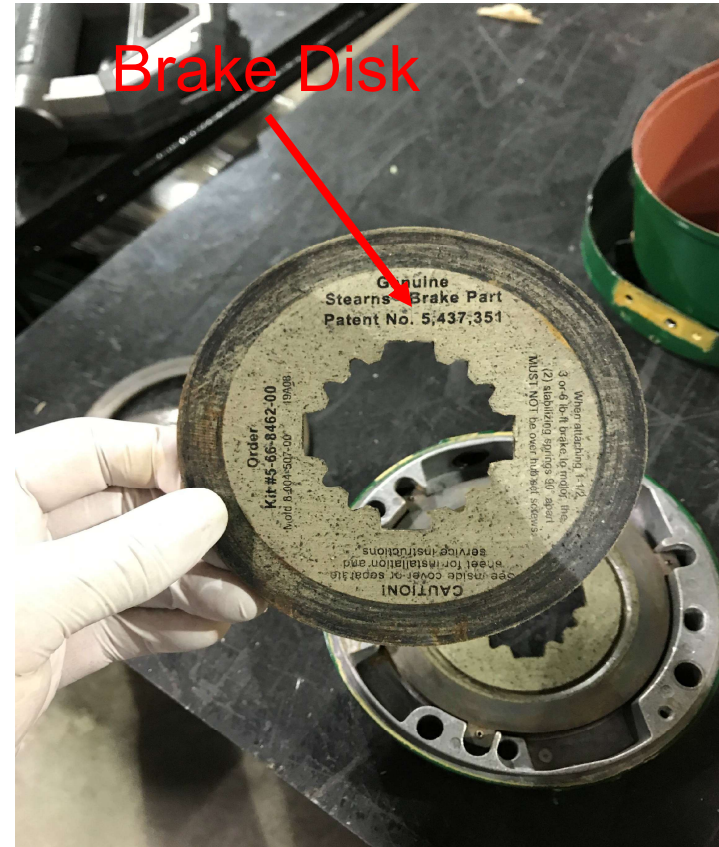

Brake Disk

Remove the pressure plate, Disk, Pressure plate, Disk, Pressure plate, Disk and then the wavy plate. Replace new parts in reverse order and readjust your Brake.

Thank You!



COLLABORATIVE ENTREPRENEURIAL SPIRIT

WINNING THROUGH CUSTOMERS

HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST

EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE

