


Presenter: Stephen May Date: 12/6/2020






450L Light Curtains

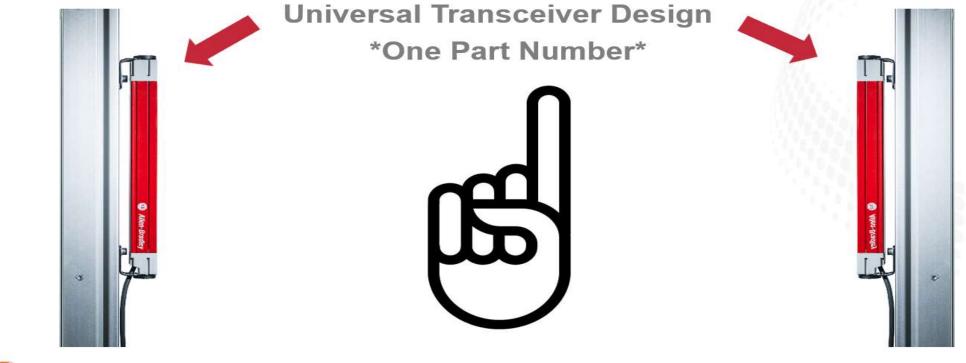

CONFIDENTIAL – Do Not Reproduce

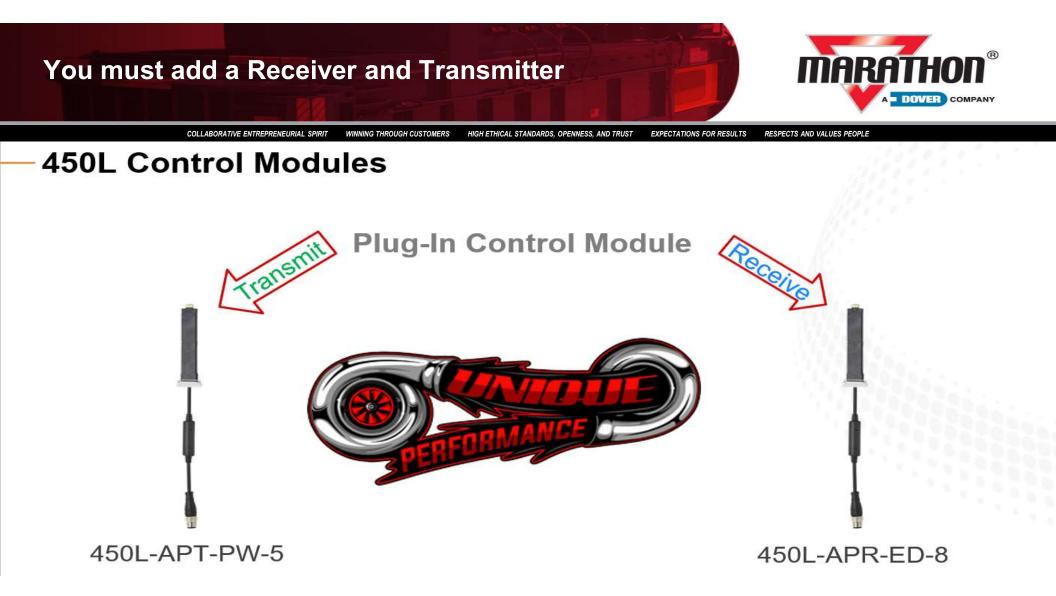

CONFIDENTIAL – Do Not Reproduce





- Plug-in Overview

Marathon Uses these							
	Catalog	Pins	Description	B	450L- E		
Transmitter (Tx)	450L-APT-PW-5	5	Tx 5 pin (No DIP Switches)	~	~		
	450L-APT-PW-8	8	Tx 8 pin	~	~		
<mark>Receiver</mark> (Rx)	450L-APR-ON-5	5	Auto reset	~	~		
	450L-APR-ED-8		Reset,EDM,Range(8 DIP Sw)	~	~		
	450L-APR-BL-5	5	Blanking, Range		~		
	450L-APR-MU-8	8	Muting & Blanking		~		
Universal (<u>Tx</u> /Rx)	450L-APU-UN-8	8	<u>Tx or</u> Rx	~	~		
Cascading	450L APC-10-8	8	Cascading on top	18 4 2	~		







COLLABORATIVE ENTREPRENEURIAL SPIRIT

WINNING THROUGH CUSTOMERS HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST RESPECTS AND VALUES PEOPLE

Mounting Brackets



(1) Pair Included w/Each Stick




450L-AM-SM Adjustable Side Mount

CONFIDENTIAL – Do Not Reproduce





450L-E Functionality

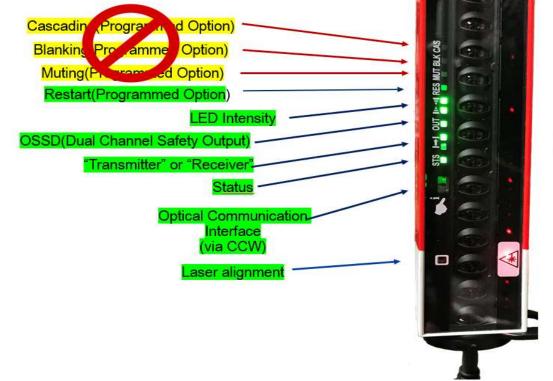

CONFIDENTIAL – Do Not Reproduce

Dip switch settings



COLLABORATIVE ENTREPRENEURIAL SPIRIT

WINNING THROUGH CUSTOMERS HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST

EXPECTATIONS FOR RESULTS RESPECTS AND VALUES PEOPLE

Out-of-Box Setup & Configuration

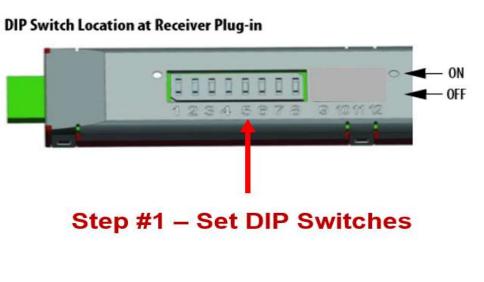


Table 22 - Function and Default Settings

Switch Number	Switch Function	Default	Description	
1		OFF		
2	Low Range Activation	OFF	OFF: Disabled ON: Enabled	
3	450L-E only: Activates Beam Coding	OFF	OFF: Disabled ON: Enabled	
4	-	OFF		
5	Combination activates the	OFF	DIP 5: OFF, DIP 6: OFF:	
6	 following start modes: Automatic start 	OFF	Automatic start (Default)	
	 Manual (re) start 		• DIP 5: ON, DIP 6: OFF:	
	 Manual cold start Manual start with off function 		Manual (re) start DIP 5: OFF, DIP 6: ON: Manual cold start DIP 5: ON, DIP 6: ON: Manual start with off function	
7	External Device Monitoring	OFF	OFF: Disabled ON: Enabled	
8		OFF		

**Note: "Transmitter" Plug-in Modules do NOT have DIP Switches

CONFIDENTIAL – Do Not Reproduce

© 2014 | Marathon Equipment Company | All Rights Reserved.

7





Out-of-Box Setup & Configuration





Fully seated, screws tight

Step #3 – Insert and Secure Receiver Plug-in Module 450L-APR-ED-8

CONFIDENTIAL – Do Not Reproduce



Out-of-Box Setup & Configuration





Fully seated, screws tight

Step #4 – Insert and Secure Transmitter Plug-in Module 450L-APT-PW-5

CONFIDENTIAL – Do Not Reproduce



— Out-of-Box Setup & Configuration



Step #5 – Remove Protective Film

CONFIDENTIAL – Do Not Reproduce



Out-of-Box Setup & Configuration

Step #6 – Connect Power & Control Cordsets



CONFIDENTIAL – Do Not Reproduce



Reconfiguration

- **NOT** Required out of the Box
- Required IF:
 - Receiver was previously operated with a **different** DIP switch configuration
 - Receiver was previously operated with a different Transmitter
 - Transmitter OR Receiver is Firmware Upgraded via CCW Software
- STS Light Flashes Red/Green at 1 Hz rate if Required

CONFIDENTIAL – Do Not Reproduce

If the STS light is Flashing ¹/₂ seconds Apart RED GREEN, you need to Teach with steps below.



RESPECTS AND VALUES PEOPLE COLLABORATIVE ENTREPRENEURIAL SPIRIT WINNING THROUGH CUSTOMERS HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST EXPECTATIONS FOR RESULTS Reconfiguration Red/Green 1 Hz Flash Status Indicator **Optical Push Button** STS I-I OUT D- -I RES Step #1 - Push Optical Button 5 Seconds Step #2 - Release Optical Button Max 2 Seconds Step #3 - Push Optical Button 5 Seconds -2 s-Step #4 - Release Optical Button 55 **Optical Push Button Activated Optical Push Button Released Red**/Green Solid Green Green/Off **Red/Green** 10 Hz 1 Hz 10 Hz

© 2014 | Marathon Equipment Company | All Rights Reserved.

14





Alignment


CONFIDENTIAL – Do Not Reproduce

By holding your finger over the window for a second the laser will turn on, Aim them toward the target. Repeat for the other side.




COLLABORATIVE ENTREPRENEURIAL SPIRIT WINNING THROUGH CUSTOMERS HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE

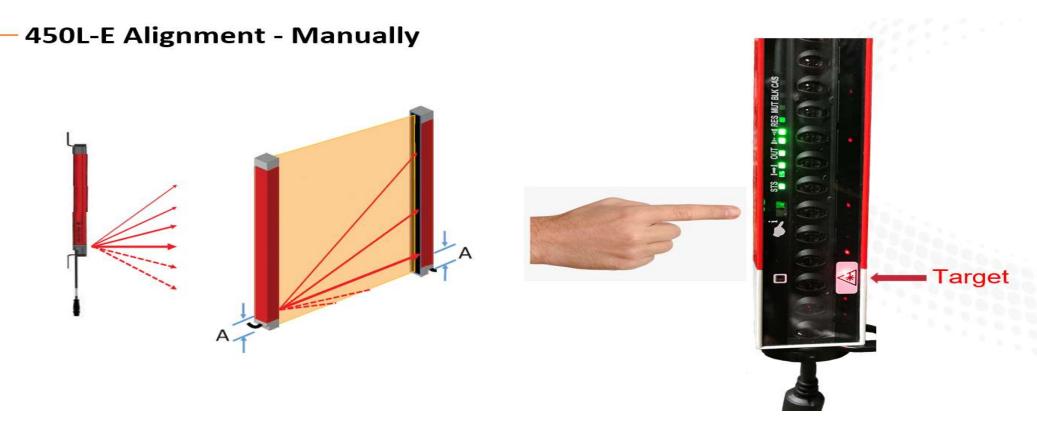

CONFIDENTIAL – Do Not Reproduce

 




Grounding – Critical for Electrical Noise Suppression

Face View of Male M12 5-pin	View	Pin Number	Signal Transmitter	
	_	1	24V DC	
5		2	No connection	
		3	0V (ground)	
3		4	No connection	
-4		5	Functional earth FE	 Gray Wire

Table 32 - Pin Assignment — Cat. No. 450L-APT-PW-5

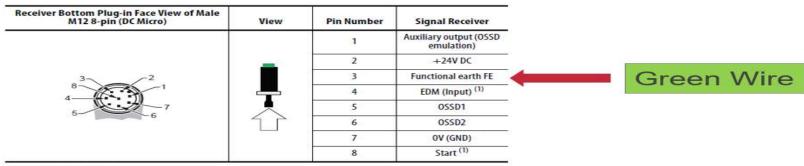

(1) If set with DIP switches.



Helpful Hints – 450L Light Curtains

- Minimum operating distance between "Transmitter" and "Receiver" is 1.5 ft for 14mm resolution.
- Minimum operating distance between "Transmitter" and "Receiver" is 3 ft for 30mm resolution.
- The laser alignment tool is a Class 2 Visible Red laser "Eye-Safe" for UNINTENTIONAL eye exposure.
- The laser alignment light has a built-in safety timer to automatically turn off after 4 minutes.
- Light curtain pairs can be mounted upside down, however, both transmitter and receiver
 <u>MUST</u> be mounted in the same orientation.
- **NEVER** insert OR remove a plug-in control module under power.
- Plug-in control modules are mechanically "keyed" and can only be inserted on the end of stick that has indicator lights.





CONFIDENTIAL – Do Not Reproduce