



How to adjust the parameters on Power Flex Drive on Amazon ECD



Presenter: Stephen May

Date: 11/16/2020 – Updated 7/7/2025


© 2024 Marathon Equipment Company | Proprietary and Confidential



Display

Display, Control, and Navigation Keys

PowerFlex 523

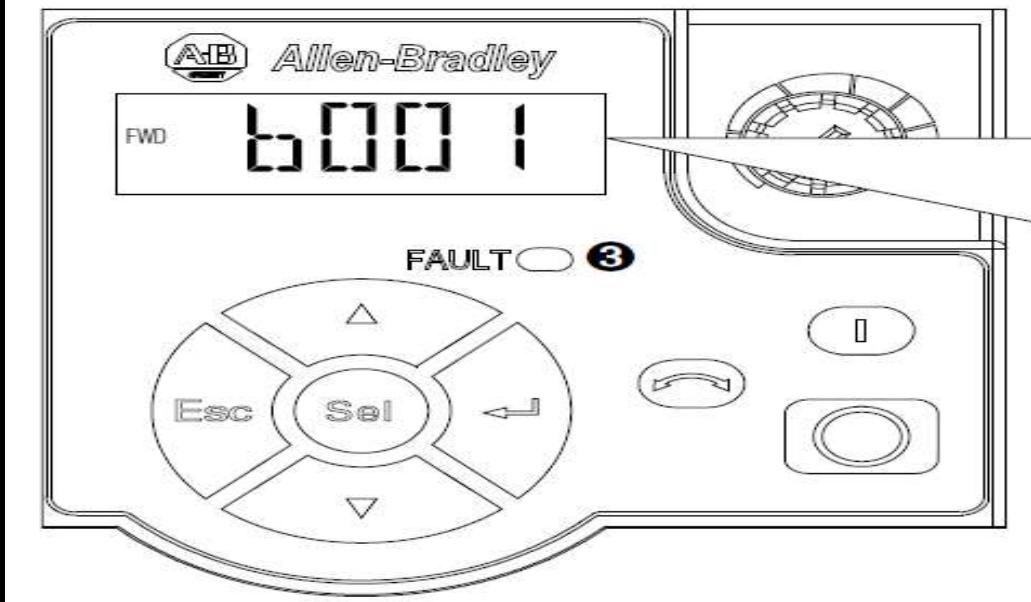

Menu	Param
b	Basic Comm
p	Basic Comm
t	Termi Progra
c	Comm Progra
l	Logic Progra
d	Advar Advar



Description of controls

Key	Name	Description	Key	Name	Description
	Up Arrow Down Arrow	Scroll through user-selectable display parameters or groups. Increment values.		Reverse	Used to reverse direction of the drive. Default is active. Controlled by parameters P046, P048, and P050 [Start Source x] and A544 [Reverse Disable].
	Escape	Back one step in programming menu. Cancel a change to a parameter value and exit Program Mode.		Start	Used to start the drive. Default is active. Controlled by parameters P046, P048, and P050 [Start Source x].
	Select	Advance one step in programming menu. Select a digit when viewing parameter value.		Stop	Used to stop the drive or clear a fault. This key is always active. Controlled by parameter P045 [Stop Mode].
	Enter	Advance one step in programming menu. Save a change to a parameter value.		Potentiometer	Used to control speed of drive. Default is active. Controlled by parameters P047, P049, and P051 [Speed Reference].



Instructions

- 1. Press the ESC button twice. You should see the b001 with the b flashing.**
- 2. Press the UP button until you see P030.**
- 3. Press the ENTER button the one in P030 should be flashing.**
- 4. Press the UP button until you see P042.**
- 5. Press the ENTER button you should see the time displayed.**
- 6. Press the Down button until you see all zeros.**
- 7. Press the ENTER button to save the change.**
- 8. Press the up button until you see P043 and press the enter button.**
- 9. Using the up button Press and hold until the setting reads 60.00**
- 10. Press the Enter button.**
- 11. Press the ESC button until you get back to the screen that reads 0.00 Hertz**

To speak with our technical support group, call: 1.877.258.1105



Parameters

Amazon VFD Parameters				
Voltage				
Port	576 V	Port	460V	
P34	3.1	P34	3.1	Motor NP FLA
P41	0.1	P41	0.1	Accel time
P42	0.5	P42	0.5	Decel time
P43	1.0	P43	1.0	Min Freq
P44	50.0	P44	50.0	Max Freq
P45	8.0	P45	8.0	Ramp +EM B CF
P46	2.0	P46	2.0	
P48	1.0	P48	1.0	
t076	15.0	t076	15.0	
t086	0.0	t086	0.0	
t087	1.0	t087	1.0	
A427	50.0	A427	50.0	
A437	30.0	A437	30.0	
A438	100.0	A438	100.0	
A484	5.0	A484	7.2	

To speak with our technical support group, call: 1.877.258.1105









N Nextelligence®
Connected-Tech Training

MARATHON TRAINING



<https://www.marathonequipment.com/service-school/>

© 2024 Marathon Equipment Company | Proprietary and Confidential





**Environmental
Solutions Group®**

**A family of companies working
for a more sustainable planet.**



www.marathonequipment.com

© 2024 The Heil Co. dba Environmental Solutions Group | Proprietary and Confidential