

# Adding Grease to Auto Greaser



*Reservoir should be checked monthly for adequate levels of grease.*

1. Locate Grease Reservoir on the Primary side of Auger



2. With both hands, turn top cover of reservoir to open



3. If grease is needed, add until full and replace cap

## Auger Auto Greaser Grease Type

*Use NLGI 2 grease.*

The unit is shipped with Nevestane XS 80 grease. This is a thick grease.