

Tech Instructions on adjusting the cycle time that the Auger runs forward.

1. From the home screen press the Go to Setting Screen
2. A Username And Password Box will appear (user : Manager - password : 9105)
3. The setting that is labeled “Auger Forward Cycle Time” touch the blue box this will allow you to lower the cycle time in seconds. (Our standard run time is set for 60 seconds) You can lower this down to around 30 seconds to see if this helps with the dust issue.
4. Once the number is changed hit the box labeled “Go to Home Screen”.

If the tech has any problems or questions, he can reach us 877 258 1105.