

MAIN SERVICE
DISCONNECT/BRANCH CIRCUIT
PROTECTION MUST BE
SUPPLIED BY INSTALLER. REFER
TO SERVICE/INSTALLATION
MANUAL FUSE AND CIRCUIT
BREAKER CHART.


SERVICE DISCONNECT

INTERMEDIATE SERVICE DISCONNECT
SUPPLIED BY MANUFACTURER


PANEL DISCONNECT

MOTOR 1 MPCB

AUGER FORWARD

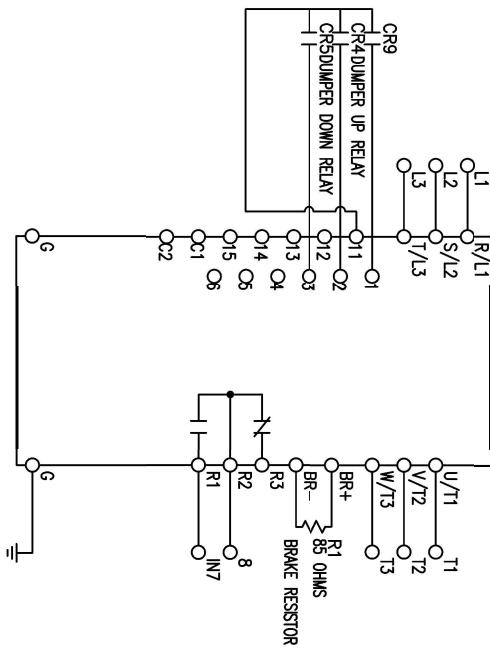

TO CONTROL TRANSFORMER

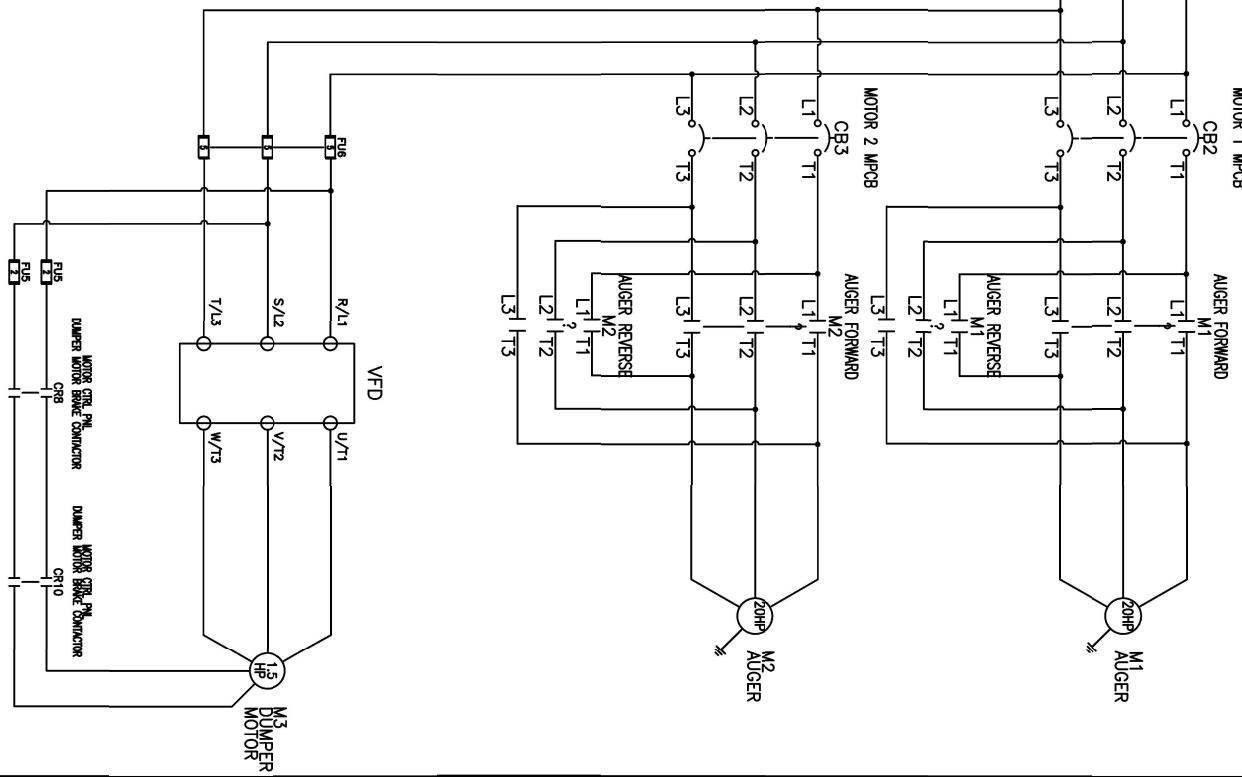

This drawing and all of the information and rights embodied and contained herein, constitutes confidential, proprietary information and trade secrets of Marathon Equipment Company. You are not permitted to use, disclose, distribute, copy, transmit, license, creative derivative works from or otherwise reproduce this drawing in whole or in part except as authorized, in writing, by Marathon Equipment Company. You agree to immediately return this drawing and any copies or reproductions thereof upon request by Marathon Equipment Company.



MOTOR CIRCUITS
AST40 W/ ELECTRIC
CART DUMPER
W/LIGHT CURTAIN