



How to Calibrate 800 touch screen.

Presenter: Stephen May

Date: 12/15/2020

Calibrating Touch Screen



COLLABORATIVE ENTREPRENEURIAL SPIRIT

WINNING THROUGH CUSTOMERS

HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST

EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE

Calibrate the Touch Screen

Over time you may notice that the objects and images on the display screen don't seem to fit the display area as well as they once did. This is normal with a touch screen and can be easily fixed.

Use a plastic stylus device with a minimum tip radius of 1 mm (0.040 in.) to prevent damage to the touch screen.

Follow these steps to calibrate the touch screen using PanelView Explorer.

Press the Go to Settings Screen Button




COLLABORATIVE ENTREPRENEURIAL SPIRIT

WINNING THROUGH CUSTOMERS

HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST

EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE

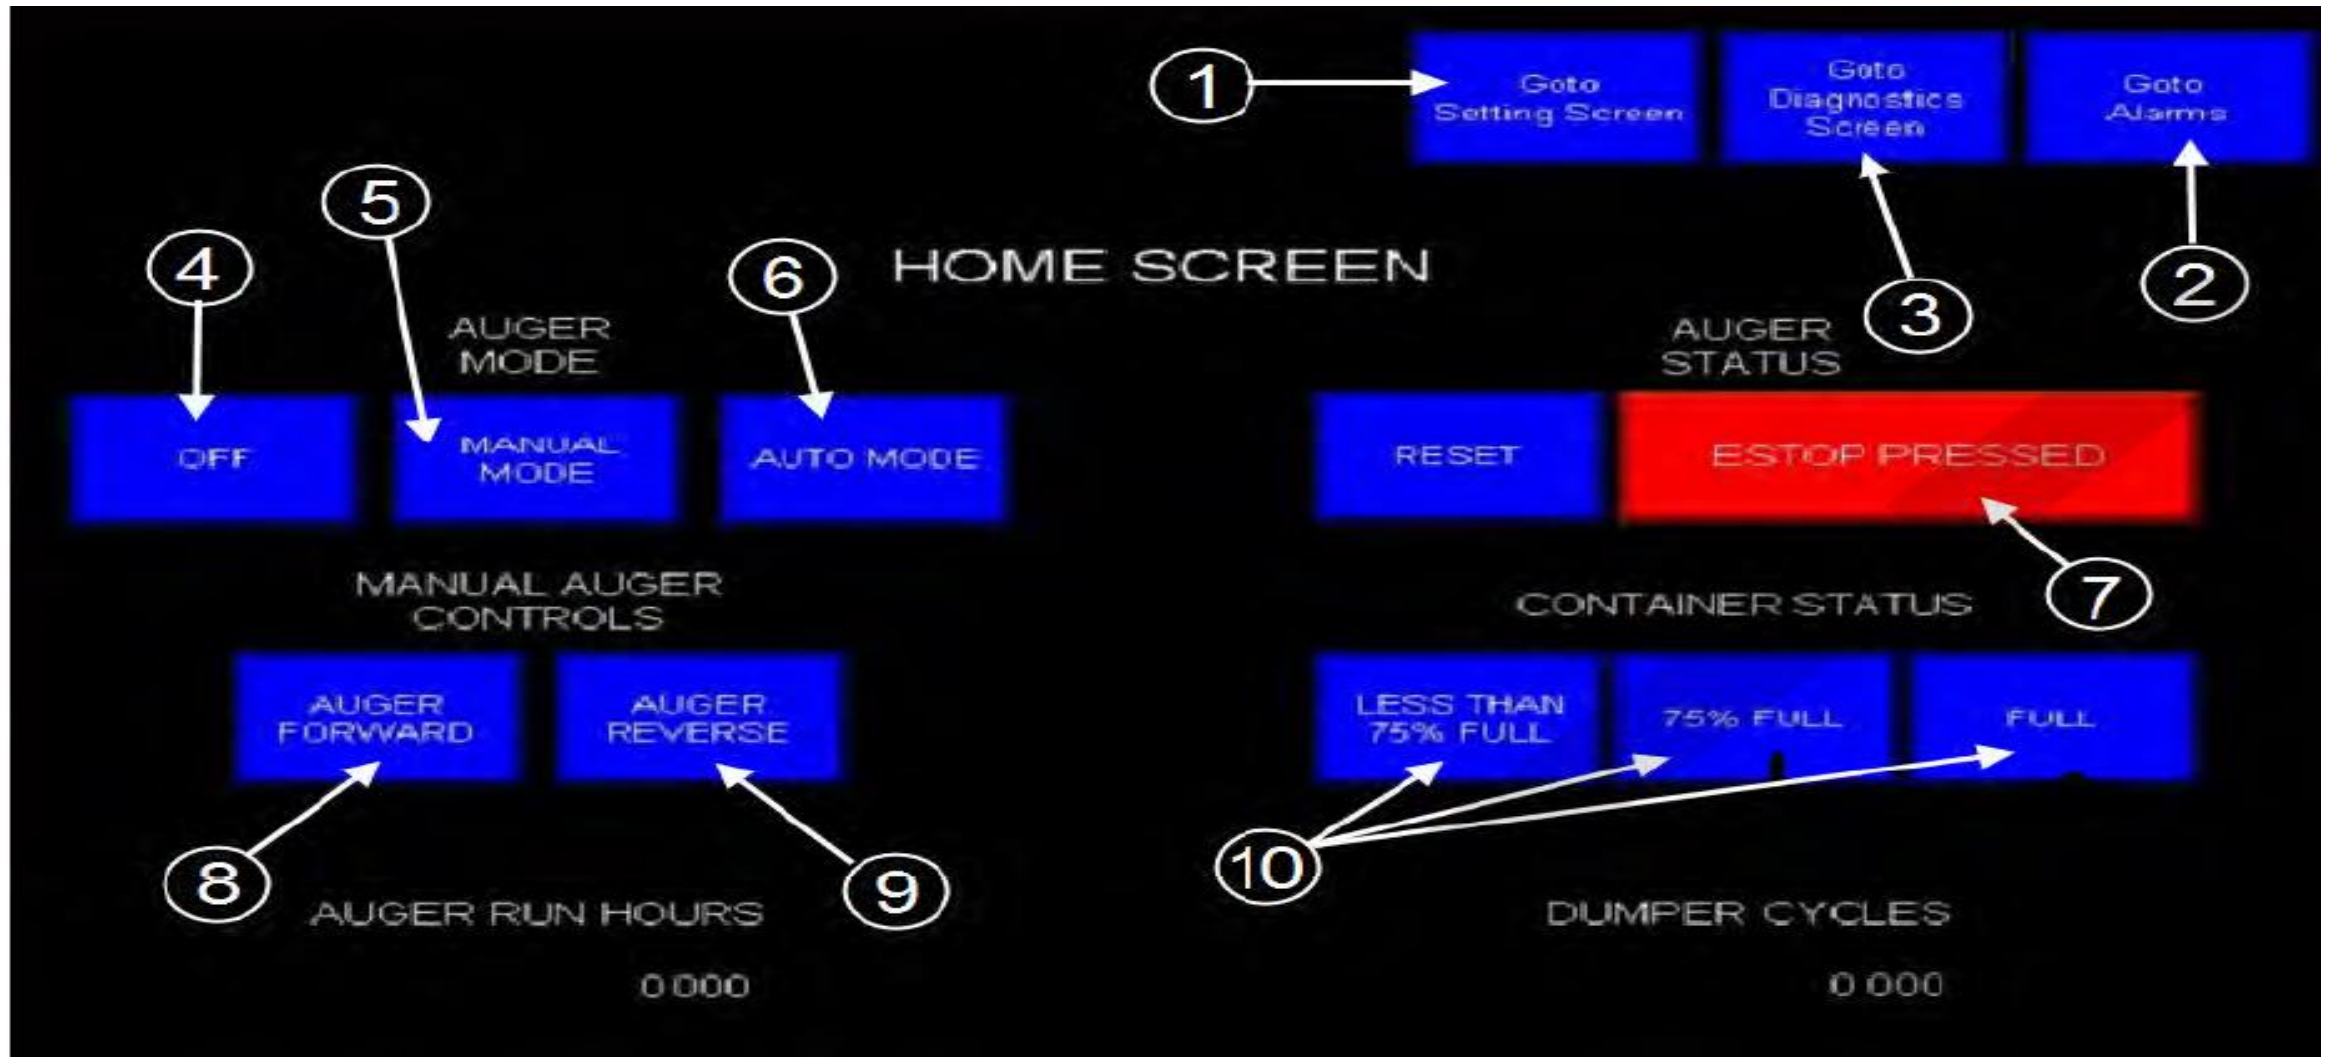

Type in User name (Manager)
Type in password (9105)
Press enter




COLLABORATIVE ENTREPRENEURIAL SPIRIT

WINNING THROUGH CUSTOMERS

HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST

EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE

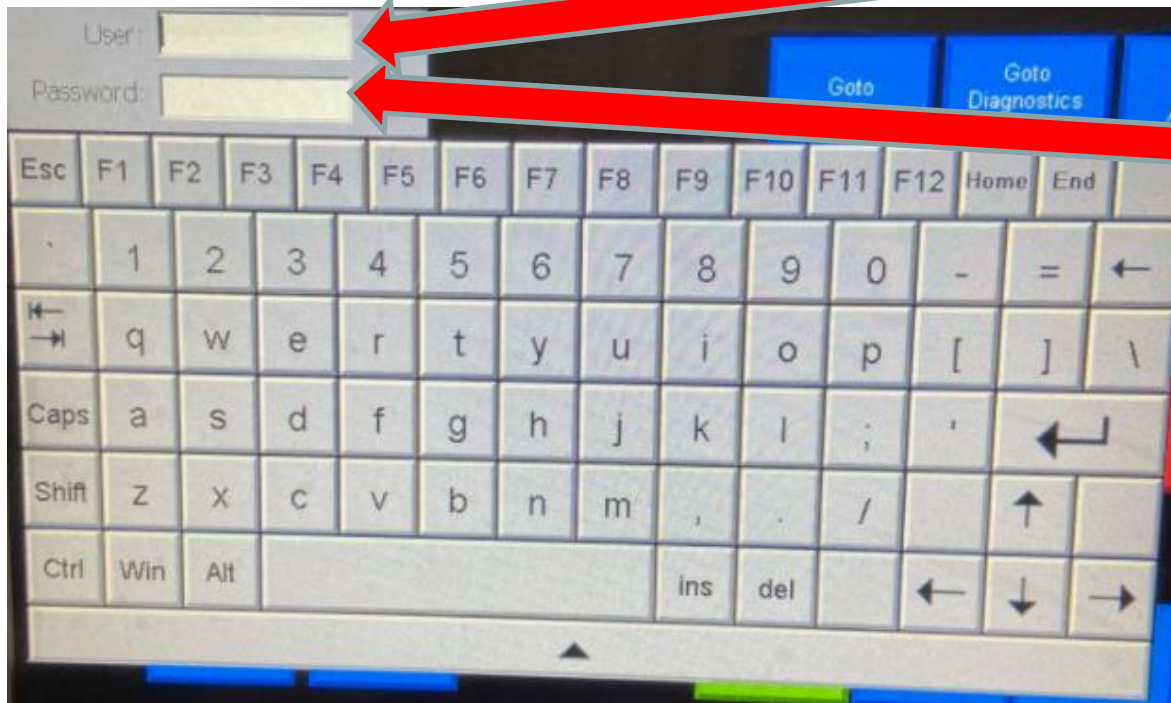

▪ THIS IS THE USER NAME LOCATION

▪ THIS IS PASSWORD LOCATION

▪ THIS IS THE ENTER BUTTON

PRESS THE GOTO CONFIG BUTTON



COLLABORATIVE ENTREPRENEURIAL SPIRIT

WINNING THROUGH CUSTOMERS

HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST

EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE



Press the Display button.



COLLABORATIVE ENTREPRENEURIAL SPIRIT

WINNING THROUGH CUSTOMERS

HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST

EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE

Main	
File Manager	Current Application <input type="text"/> Goto
Communication	Config Language ▶ English Português Français Italiano Deutsch Español 简体中文 Reset Terminal
Display	Date and Time Day: 14 Hour: 10 Month: 1 Minute: 30 Year: 2015 Second: 56
System Information	

Press the Calibrate Touchscreen button



COLLABORATIVE ENTREPRENEURIAL SPIRIT

WINNING THROUGH CUSTOMERS

HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST

EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE


Display	
Brightness	<input type="button" value="▲"/> 100 <input type="button" value="▼"/>
	<input type="button" value="Calibrate Touchscreen"/>
Orientation	<input type="button" value="Landscape"/>
Screen Saver	
Mode	<input type="button" value="▲"/> Image <input type="button" value="▼"/>
Brightness	<input type="button" value="▲"/> 11 <input type="button" value="▼"/>
Timeout	<input type="button" value="▲"/> 10 Min <input type="button" value="▼"/>
	<input type="button" value="Main"/>

Follow the steps below.



COLLABORATIVE ENTREPRENEURIAL SPIRIT WINNING THROUGH CUSTOMERS HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST EXPECTATIONS FOR RESULTS RESPECTS AND VALUES PEOPLE

1. With a stylus, tap the center of the target (+) on the terminal screen.

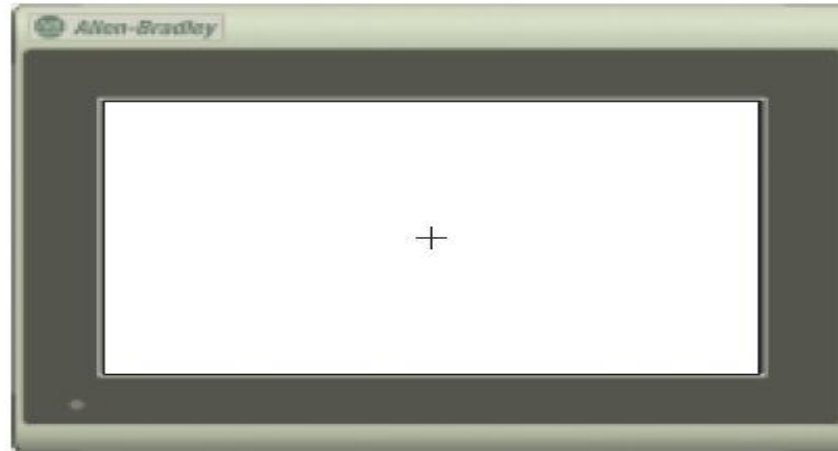

2. Repeat step 1 as the target moves around the screen.



Follow the steps below.



COLLABORATIVE ENTREPRENEURIAL SPIRIT


WINNING THROUGH CUSTOMERS

HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST

EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE

3. Tap OK when the message appears to accept the changes.
If you do not tap the screen within 30 seconds, the calibration data is discarded and the current settings are retained.

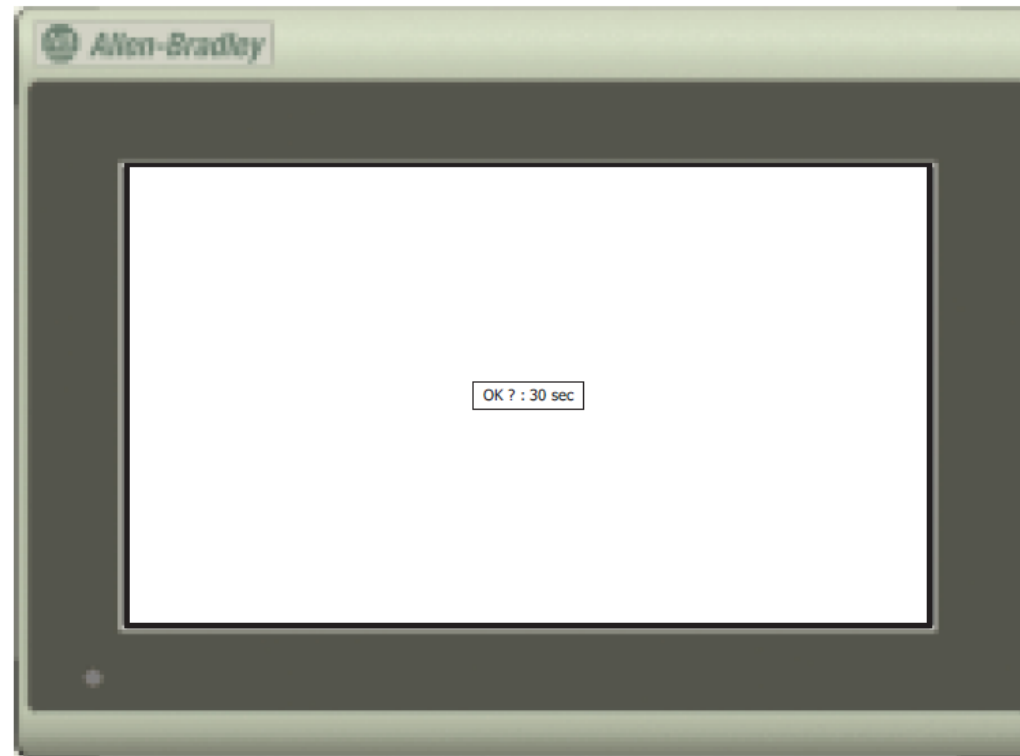

Follow the steps below.



COLLABORATIVE ENTREPRENEURIAL SPIRIT

WINNING THROUGH CUSTOMERS

HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST

EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE

1. Go to the main configuration screen.

Main																	
File Manager	Current Application <input type="text"/> Goto																
Communication	<table border="1"><thead><tr><th colspan="2">Config Language</th></tr></thead><tbody><tr><td>▶ English</td><td>▲</td></tr><tr><td>Português</td><td></td></tr><tr><td>Français</td><td></td></tr><tr><td>Italiano</td><td></td></tr><tr><td>Deutsch</td><td></td></tr><tr><td>Español</td><td></td></tr><tr><td>简体中文</td><td>▼</td></tr></tbody></table>	Config Language		▶ English	▲	Português		Français		Italiano		Deutsch		Español		简体中文	▼
Config Language																	
▶ English	▲																
Português																	
Français																	
Italiano																	
Deutsch																	
Español																	
简体中文	▼																
Display	<table border="1"><thead><tr><th colspan="2">Date and Time</th></tr></thead><tbody><tr><td>Day</td><td>Hour</td></tr><tr><td>14</td><td>10</td></tr><tr><td>Month</td><td>Minute</td></tr><tr><td>1</td><td>30</td></tr><tr><td>Year</td><td>Second</td></tr><tr><td>2015</td><td>56</td></tr></tbody></table>	Date and Time		Day	Hour	14	10	Month	Minute	1	30	Year	Second	2015	56		
Date and Time																	
Day	Hour																
14	10																
Month	Minute																
1	30																
Year	Second																
2015	56																
System Information	Reset Terminal																

2. Press Reset Terminal.
3. Press Yes to confirm.

Thank You!



COLLABORATIVE ENTREPRENEURIAL SPIRIT

WINNING THROUGH CUSTOMERS

HIGH ETHICAL STANDARDS, OPENNESS, AND TRUST

EXPECTATIONS FOR RESULTS

RESPECTS AND VALUES PEOPLE

